

TiVo® Series S5 Netflix Remote Control

TiVo. Takes you to the TiVo Central® screen, the starting point for all TiVo features and settings.

TV PWR. If programmed, turns your TV on or off.

Input. Selects the input your TV displays (such as DVD player, game system).

Back. Goes back to the previous screen (in certain apps).

Guide. Takes you to the program guide, where you can find shows to watch or record. Press again to see filtered views.

Volume and Mute. If programmed, control the volume on your TV or A/V receiver.

Play. Starts playing a show from the My Shows list.

Rewind. Rewinds a show. Press up to three times for three speeds.

Replay. Repeats the last eight seconds of the show. Press and hold to jump to the beginning of a show.

Thumbs Up and Thumbs Down. Rate shows, collections, or video providers for TiVo Suggestions.

Netflix. One click takes you to the Netflix app.

A, B, C, D. Sort and filter views. Look for the on-screen tips.

Slow. Plays a show in slow motion.

Clear. Removes display of info banner or program guide and deletes titles from My Shows or To Do list.

Live TV. Takes you to Live TV. If you're watching Live TV, use it to cycle through the tuners.

Info. Shows the info banner while watching Live TV. Press again to make it disappear.

Select. Choose menu items. When watching Live TV, press to bring up the Mini Guide.

Exit. Takes you back to the section you were in previously.

Arrows. Navigate TiVo menus and program guide.

Channel Up/Down. Change the channel and page up or down while in the program guide or TiVo menus.

Search. Goes directly to the search menu.

Record. Starts recording the show you're watching, or sets up a recording for a show selected in the program guide.

Fast-Forward. Fast-forwards through a show. Press up to three times for three speeds.

Pause. Freezes a show. Press again to resume playing.

Advance. Moves forward in 30-second increments. Press and hold to jump to the end of the show. Press to jump to the next tick mark when fast-forwarding or rewinding.

On Demand. Takes you to the main screen for video-on-demand options. **NOTE: Not yet available.**

Enter/Last. Returns to last channel viewed in Live TV.



To program your TiVo remote, press the TiVo button to go to TiVo Central, then select Settings & Messages > Settings > Remote, CableCARD, & Devices > Remote Control Setup. Follow the easy on-screen instructions.

For more remote control tips, visit support.westmancom.com