

Your WCG Connect TV Remote

Take control of the complete streaming TV experience.

The remote control ("remote") is used to navigate the User Interface ("UI") screens and menus, and to configure and control features and functions.

Power

Turns your TV power on/off.

Input

Switches between input sources such as TV and HDMI connected devices.

Shortcuts

A: Guide.

B: Movies.

C: Multiview.

Playback Controls

Performs standard playback functions when viewing shows.

Apps

Navigation and OK

Use the arrows to navigate up/down/right/left. As well as, for fast forward, rewind, replay, skip, Restart and Lookback TV features.

OK - The middle button. Used to confirm or to select, record and pause your TV.

Back

Takes you back to a previous screen.

Volume

Increase or decrease TV volume.

Info & Search

Power

Switches the set-top box to power on/off or standby mode.

Microphone.

Shortcuts

Red: Records the program you are watching, either in Live TV or from the grid-style guide.

Green: Returns you to the last live channel you viewed.

Yellow: Takes you to your recents list.

Blue: Takes you to Catchup so you can browse programs that aired earlier.

Guide

Display your Live TV grid-style guide.

Main Screen

Takes you back to the main Connect TV screen.

Channels

Channel/Page up and down.

Google Assistant

Press and release the button to enable Google Assistant using voice commands.

Mute.

**Subtitles/
closed captions
Last channel recall**

Low Battery Light



To quickly scroll through the Live TV Guide, press and hold the up or down navigation arrow. After a moment, the channels will scroll in ultra-fast speed.